

INDEX

- Aiming Lights, 9-19**
- Air Filter, 7-6**
- Bottom Target Lamp**
- Brake Shoes,**
 - Adjustment, 9-1
 - Inspection & Replacement, 8-19
 - Stroke Adjustment, 9-4
- Brake Solenoid,**
 - Test & Replacement, 8-23
 - PCB Replacement, 8-26
 - Tubing Inspection, 8-28
- Circuit Breakers, 8-1**
- Clutch, 8-38**
- Converter,**
 - Definition, 1-1
 - Replacement, 8-96
 - Use, 3-10
- Converter Switch, 3-1**
- Counter, 8-92**
- Disconnect Switch, 3-4**
- Drive Belt,**
 - Adjustment & Replacement, 9-14
 - Inspection, 9-13
- Drive Motor, 8-29**
- Electronics Package,**
 - Installation, 2-3
 - Test & Replacement, 8-7
- Foot Switch,**
 - Definition, 3-3
 - Test & Replacement, 8-37
- Film Hold-downs,**
 - Definition, 1-1
 - Use, 3-11
- Gibs, 9-7**
- Hold-Downs**
 - Inspection, 8-46
 - Pad Inspection & Replacement, 8-53
 - Solenoid Test & Replacement, 8-47
 - Spring Inspection & Replacement, 8-51
 - Pressure Valve Adjustment, 9-15
- Lamp Shield, 8-54**
- Manual Button, 3-1**
- Motor Starter Relay, 8-12**
- O.S.H.A. Specifications, vii**
- Ram Switch,**
 - Adjustment, 9-12
 - Test & Replacement, 8-14
 - Timing Check, 9-9
- Rotation Control Table,**
 - Definition, 1-1
 - Installation, 2-8
 - Switch, 3-4
 - Use, 3-11
- Safety Tips, vi**
- Scan Switch, 3-2**
- Sensing Heads,**
 - Adjustment, 9-17
 - Clean Lenses, 7-5
 - Mounting Inspection, 8-59
 - Replacement, 8-63
- Troubleshooting, 8-61**

INDEX

Servo Motors,

- In-Out Motor Replacement, 8-67
- In-Out Transformer Replacement, 8-70
- Left-Right Motor Replacement, 8-68
- Left-Right Transformer Replacement, 8-71
- Test, 8-65

Sensing Switch, 3-2

Set Up Switch,

- Definition, 3-3
- Test & Replacement, 8-10

Single Axis Corrector Table,

- Definition, 1-1
- Installation, 2-8
- Use, 3-11

Sliding Backrail,

- Definition, 1-1
- Use, 3-11

Slug Vacuum,

- Tubing Inspection, & Repair, 8-56
- Solenoid Test & Replacement, 8-57

Sola Transformer, 8-3

Special Bolster Plate,

- Definition, 1-1

Specifications, 1-3

Target Switch, 3-2

Targets,

- Identification, 3-5
- Specifications, 4-1

Tooling,

- Alignment, 8-85
- Alignment Check, 8-83
- Replacement, 8-73
- Size Range, 8-72
- Sharpening, 8-81

Vacuum Switch, 3-3